


# SOS 500 & SOS 1000 – Installation Oxygen Service

Instructions

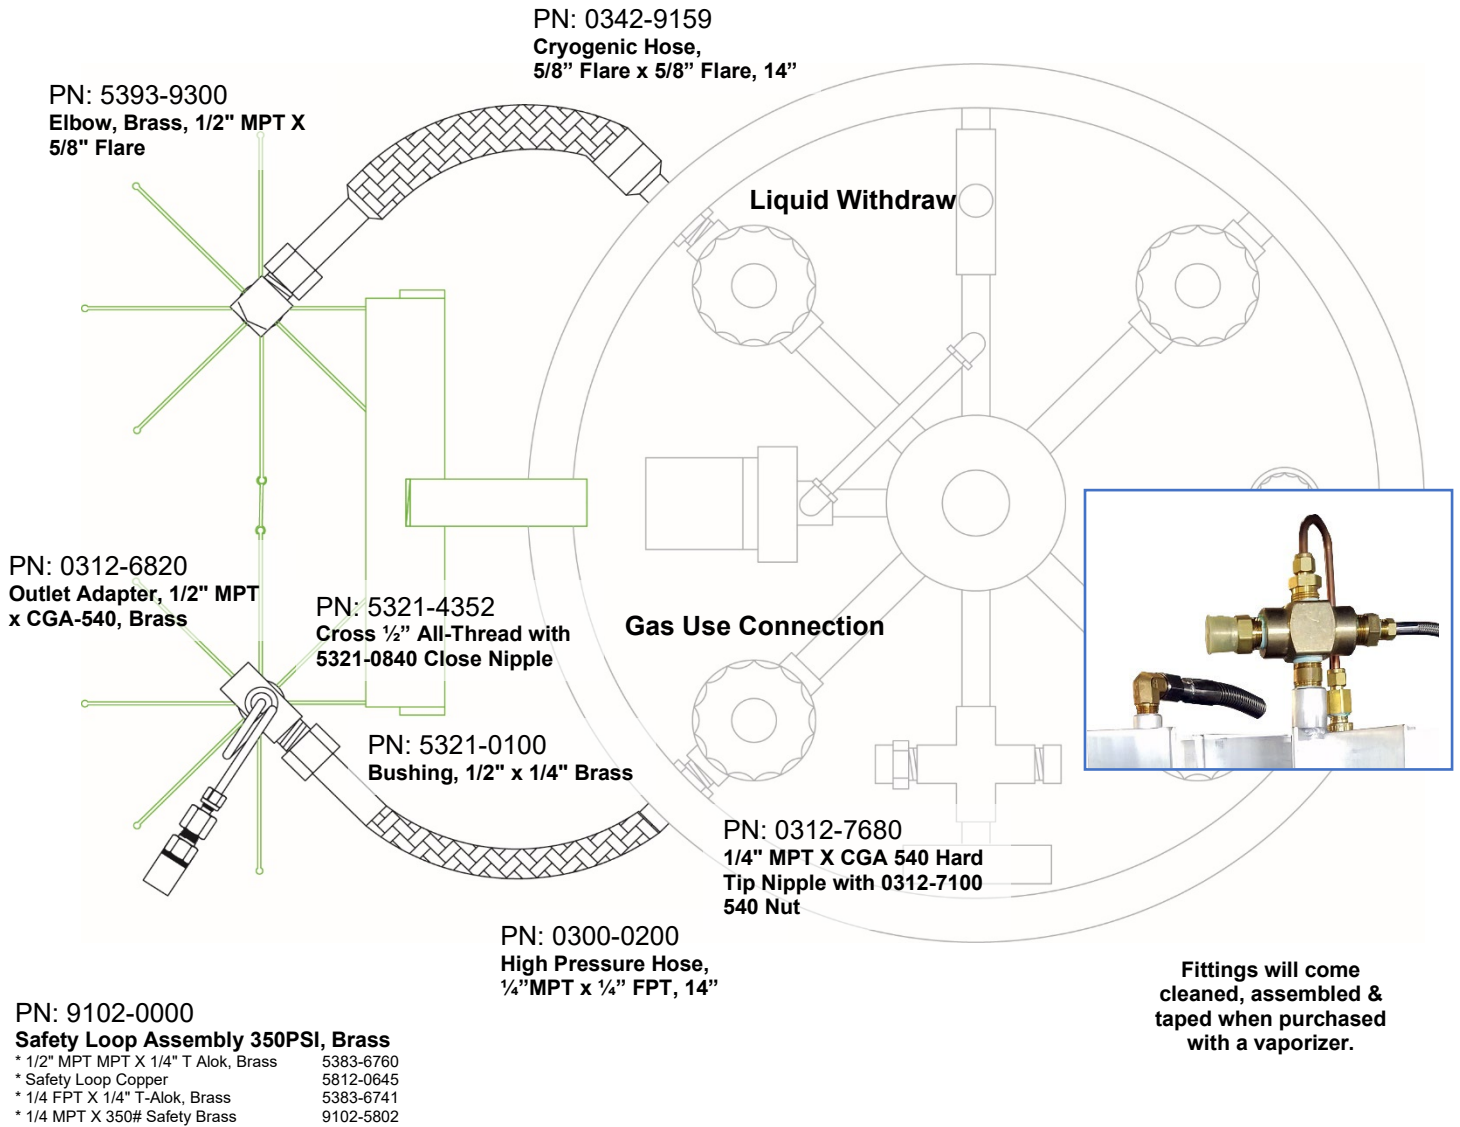


**Install & Operating Instructions for SOS 500 & 1000:**

1. Connect the SOS Vaporizer onto top protection ring of the liquid container/VGL. Be sure to center it between the liquid withdraw and gas use valves, as shown above.
2. Connect the largest hose (Cryogenic Hose) to the liquid withdraw connection.
3. Connect the smaller hose to the gas use connection of the container/VGL.
4. Connect the customer supplied regulator or hose to the SOS gas outlet tee. The SOS is now installed in parallel with the liquid container/VGL internal vaporizer.

# SOS 500 & SOS 1000 – Installation Inert Service

Instructions

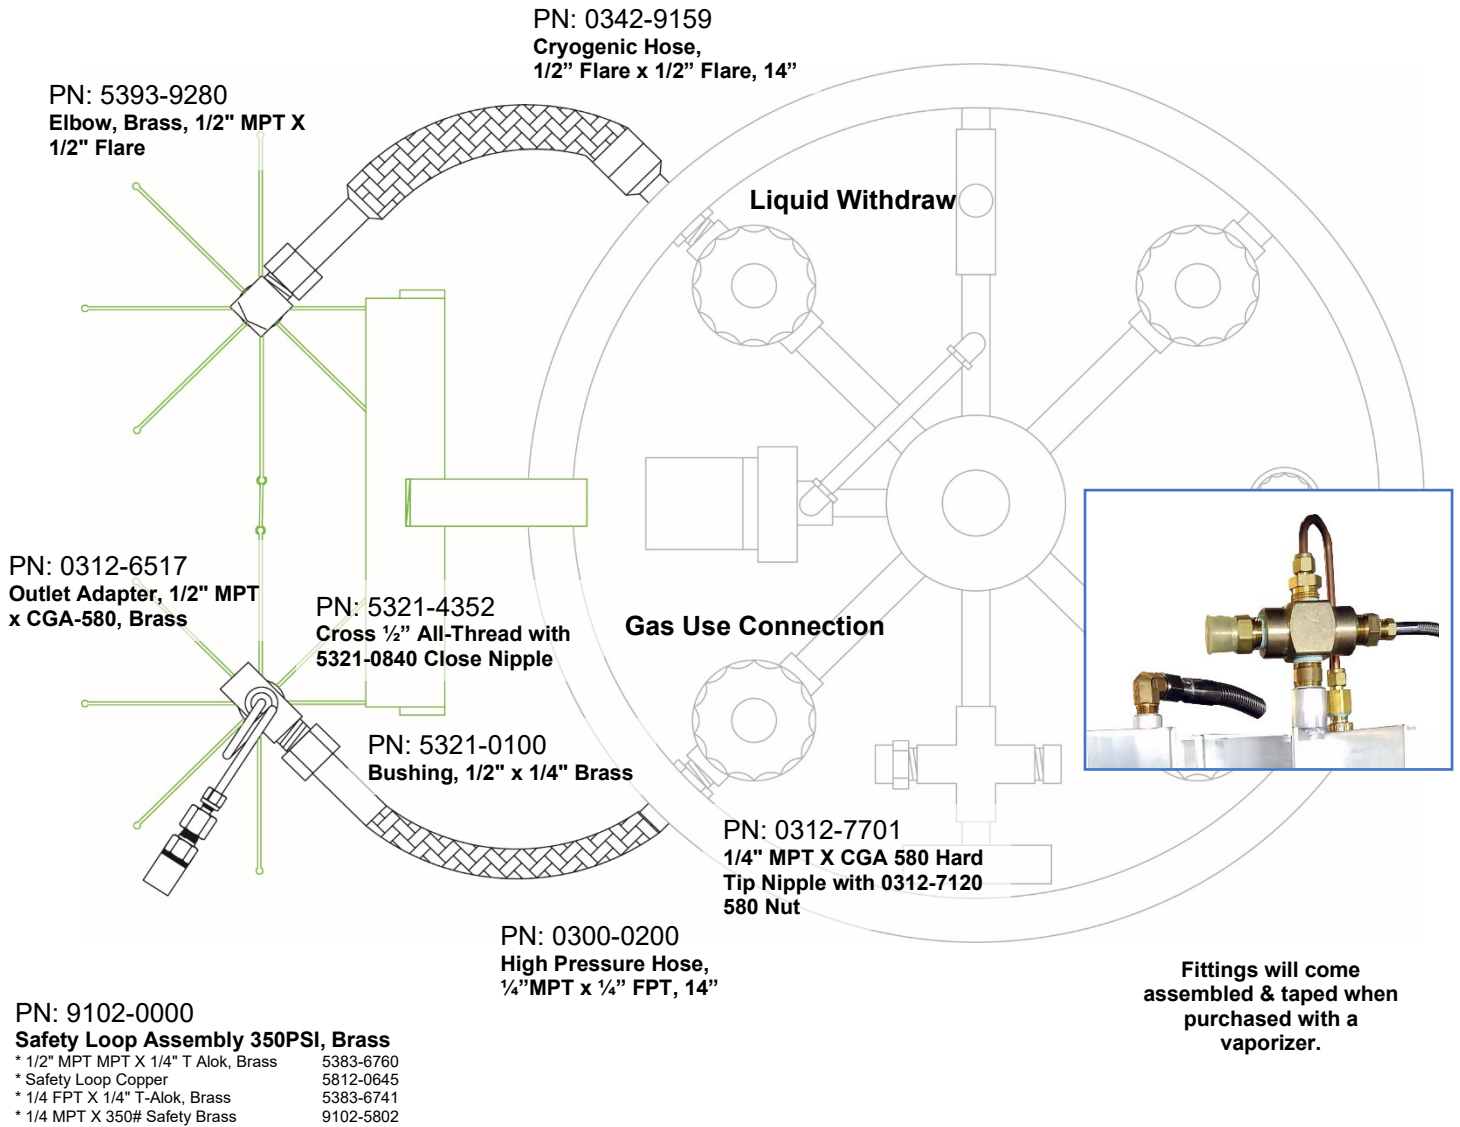

**Install & Operating Instructions for SOS 500 & 1000:**

5. Connect the SOS Vaporizer onto top protection ring of the liquid container/VGL. Be sure to center it between the liquid withdraw and gas use valves, as shown above.
6. Connect the largest hose (Cryogenic Hose) to the liquid withdraw connection.
7. Connect the smaller hose to the gas use connection of the container/VGL.

Connect the customer supplied regulator or hose to the SOS gas outlet tee. The SOS is now installed in parallel with the liquid container/VGL internal vaporizer.